





Flushing Kit

for NOVADRY, VARODRY and CLAWVAC

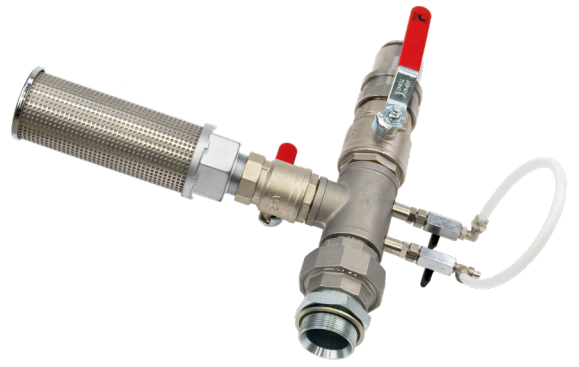

Key Features:

- Convenient flushing procedure to clean the rotors
- Removes all kinds of particles and even soft layers
- Quick and easy flushing procedure
- Easy connection of water or solvent

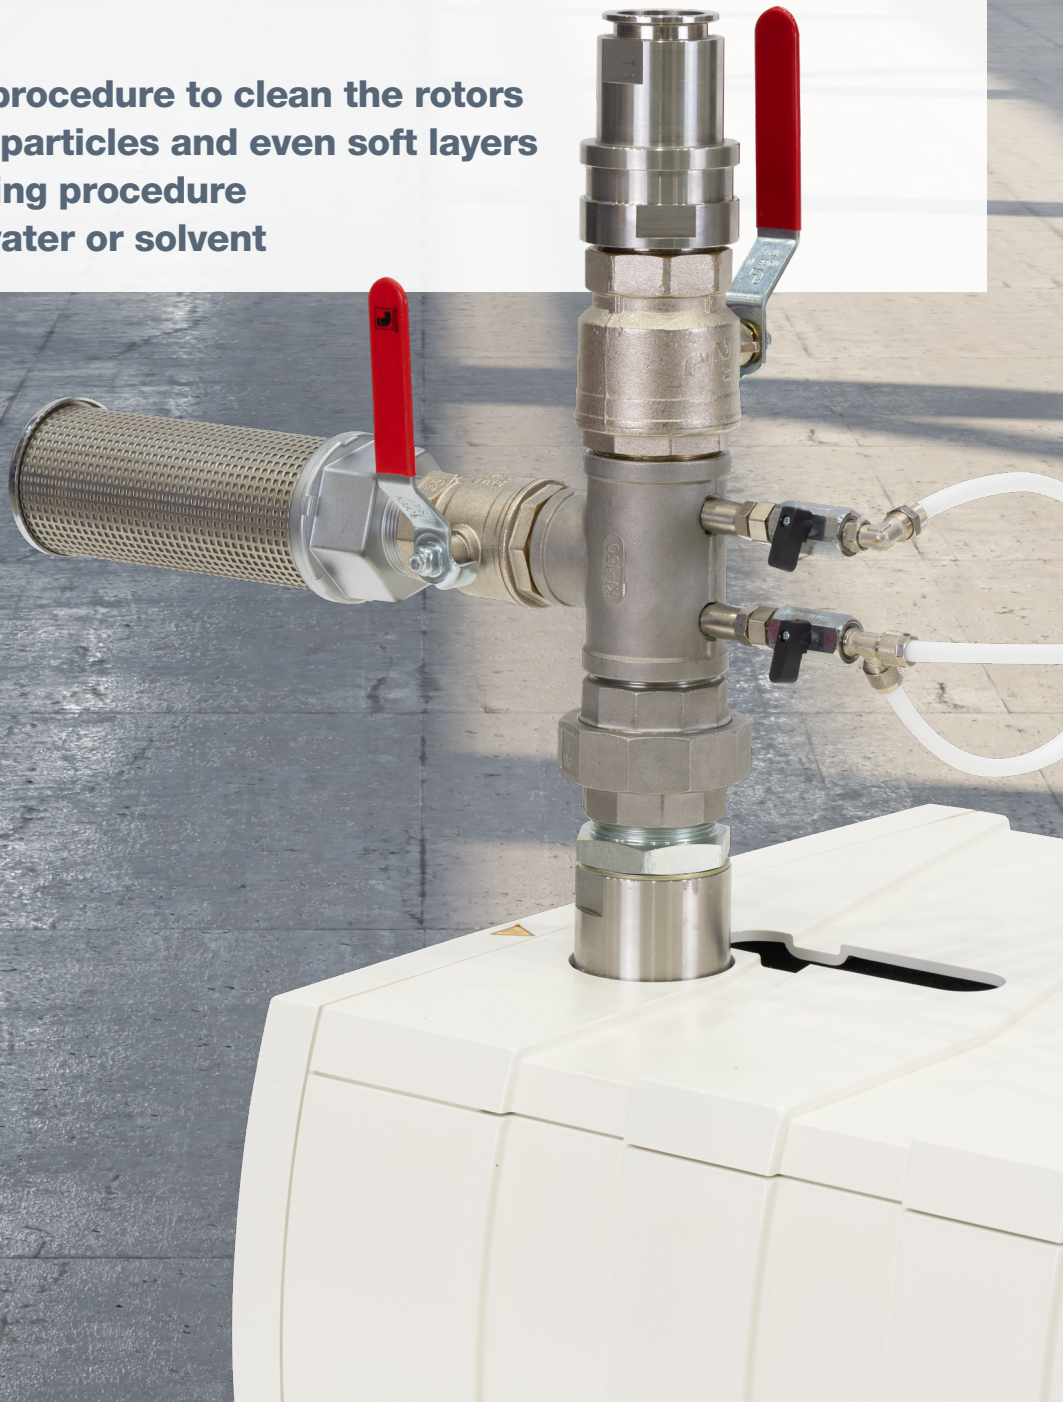

Flushing Kit for NOVADRY, VARODRY and CLAWVAC

OPERATION

■ Full convenience for all VARODRY, NOVADRY and CLAWVAC

- Allows flushing without disassembling the pump from the process
- Easy switch to the flushing procedure via one valve setting

■ One inlet for cleanser or water:

- Safe handling of water or cleanser next to your process

■ Save flushing process with purge:

- Purge keeps sensitive pump areas dry
- For NOVADRY and VARODRY OEM: Purge Upgrade Kit needed

■ Highest flexibility for best flushing results:

- Flushing with water or special cleansers
- Different cleanser temperatures
- Optimal flushing frequency and duration

■ Ordering information:

- Flushing Kit - PN 111005A00

YOUTUBE VIDEOS




NOVADRY




CLAWVAC

THE PERFECT
WELLNESS
TREATMENT FOR
YOUR PUMP!

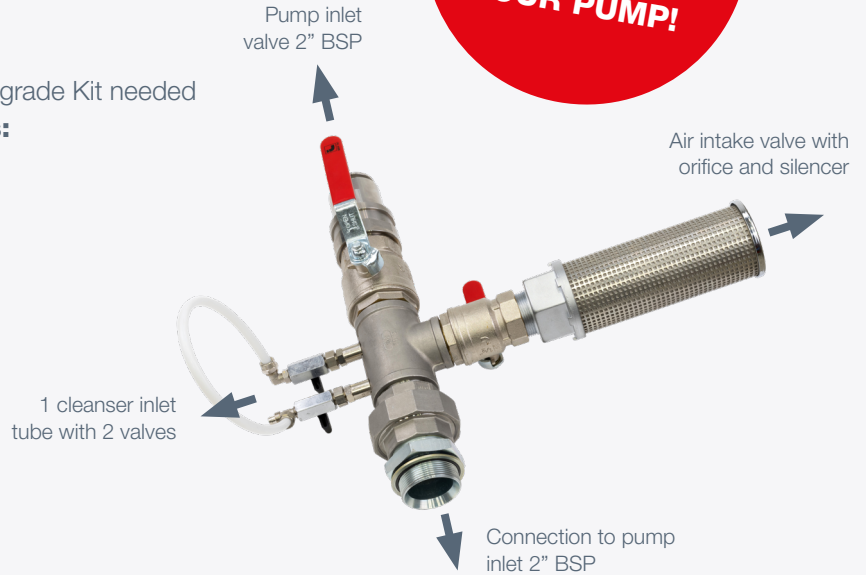

APPLICATION EXAMPLES

VARODRY

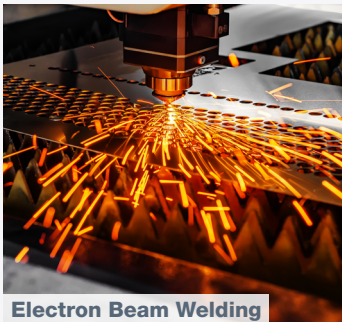

NOVADRY & CLAWVAC



- Frequent flushing saves the pump from process contamination
- Full hygienic cleaning for food applications
- Flushing procedure after each process cycle for optimal results

 **Leybold**

Pioneering products. Passionately applied.