



## All-in-One Inlet Filter Kits

To safeguard the vacuum pump from abrasive dust particles


Our inlet filter kits are indispensable for safeguarding vacuum pumps from abrasive dust particles, enhancing long-term efficiency, and extending the overall lifespan of the equipment. Incorporating these filters into your maintenance routine is a prudent investment in the reliable performance of your vacuum pump system. Inlet filter kits are specifically recommended for Leybold technologies such as SOGEVAC, CLAWVAC, VARODRY, and NOVADRY.



**Plug & Go**



**Heavy capacity**

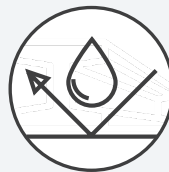

**Corrosion resistant filter**




**Easy filter replacement**

### Technical data:

- Element: Polyester filter element with efficiency of 99+% up to 5µm
- Casing: Carbon steel (Corrosive resistant)
- Allowable temp for continuous operation: min -26°C max 104°C
- Change Filter element after: 37- 50 mbar over initial  $\Delta P$
- Pumping speed reduction (Clean filter): 2%
- Polyester: Medium to heavy duty (Moist process), washable
- Paper: Light duty application (Dry process), not washable

### Following methods can be used:

- Wash in warm soapy water, max 3 times. Remember to DRY-OUT
- Or vacuumed
- Or gently blown by compressed air

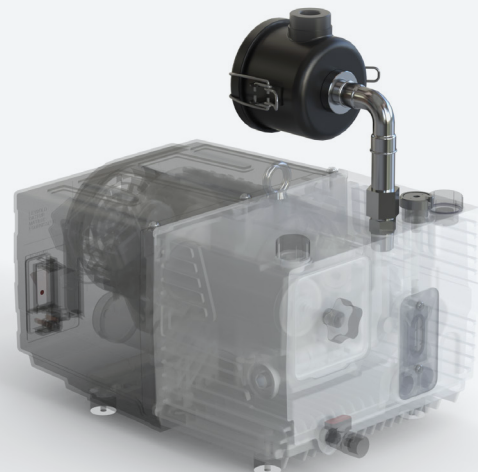

# All-in-One Inlet Filter Kits

## Europe

Pumps	Inlet filter kits	P/Ns	Replacement filter elements
SV 16–25 B	Kit Inlet Filter Poly 1/2" Kit Inlet Filter Paper 1/2"	8090360122 8090360121	8090360138 8090360137
SV 40–65 CP 65 (B)	Kit Inlet Filter Poly 1 1/4" Kit Inlet Filter Paper 1 1/4"	8090360124 8090360123	8090360140 8090360139
SV 100–120 CP 150 (B)	Kit Inlet Filter Poly 1 1/4" Oversized Kit Inlet Filter Paper 1 1/4" Oversized	8090360118 8090360141	8090360134 8090360133
SV 220–300 CP 300 (B) ND/VD 65-200	Kit Inlet Filter Poly 2" Kit Inlet Filter Paper 2"	8090360120 8090360119	8090360136 8090360135

## China

Pumps	Inlet filter kits	P/Ns	Replacement filter elements
SV 16–25 B	Kit Inlet Filter Poly 1/2"	8090360158	8090360166
SV 40–65 CP 65 (B)	Kit Inlet Filter Poly 1 1/4"	8090360159	8090360167
SV 100–120 CP 150 (B)	Kit Inlet Filter Poly 1 1/4" Oversized	8090360160	8090360168
SV 220-300 CP 300 (B) ND VD 65 – 200	Kit Inlet Filter Poly 2"	8090360161	8090360169

## America

Pumps	Inlet filter kits	P/Ns	Replacement filter elements
SV 16–25 B	Kit Inlet Filter Poly 1/2"	8090360101	8090360115
SV 40–65 CP 65 (B)	Kit Inlet Filter Poly 1 1/4"	8090360102	8090360115
SV 100–120 CP 150 (B)	Kit Inlet Filter Poly 1 1/4" Oversized	8090360103	8090360116
SV 220–300 CP 300 (B) ND/VD 65-200	Kit Inlet Filter Poly 2"	8090360104	8090360117



Pioneering products. Passionately applied.